

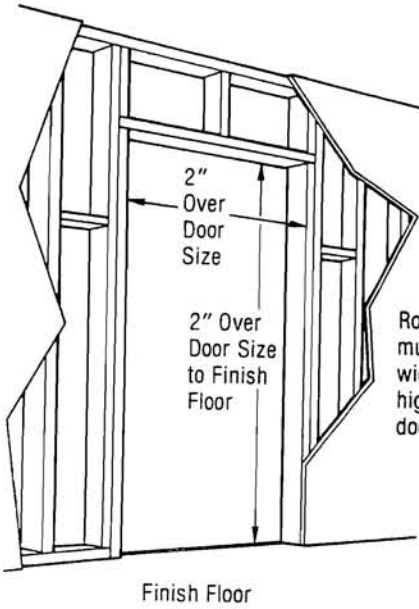
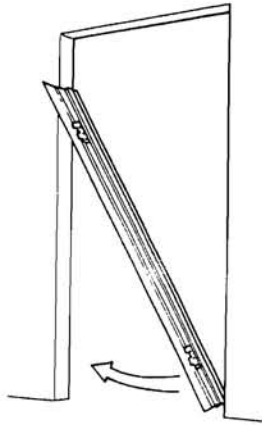



FRAMES FURNISHED WITH 3-1/2" RADIUS CORNER HINGES APPLIED 4-9/16" WALL SHOWN. ALSO AVAILABLE FOR OTHER WALL SIZES.

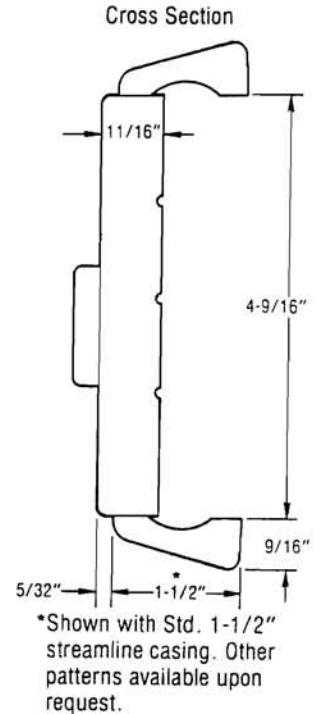


Rough opening must be 2" wider and 2" higher than door size.

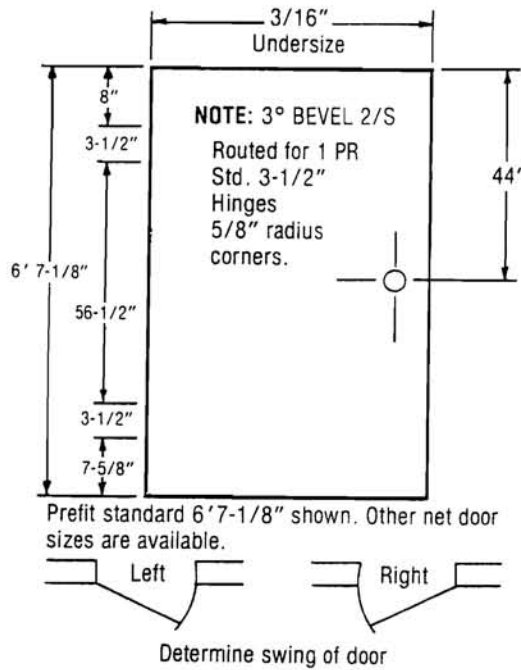


Slip hinge jamb into position in rough opening.

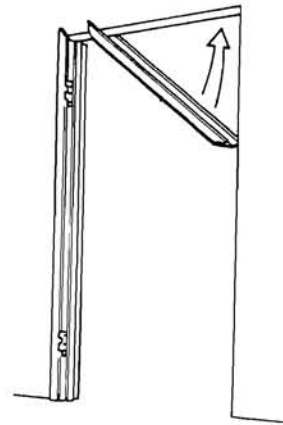

Place header into position engaging tongue on header in special rabbet of hinge jamb.

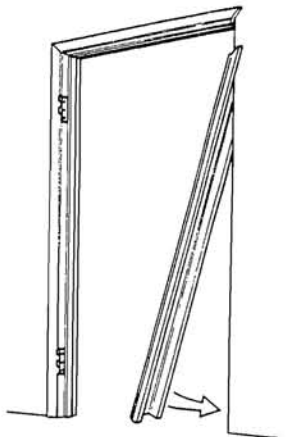

Slip strike jamb into position. Engage header tongue in rabbet. (Foam pad on jamb will apply pressure to close miters tightly.)

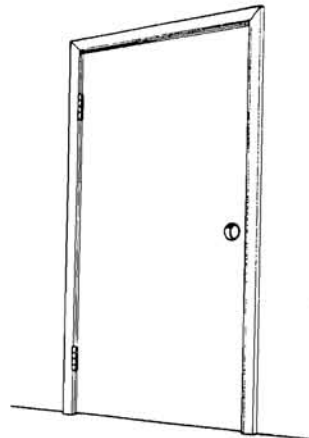

Place door on its hinges. Adjust frame to door. Nail-off casing all the way around, nailing approx. 12" apart. Repeat nailing of casing on backside.